



# Planet Fitness Lunk Alarm

## INSTALLATION GUIDE

ver. 062323

For Support Call: 603.436.8210



Two Persons are  
Recommended  
for this Installation

# Planet Fitness Lunk Alarm Installation

PLEASE NOTE: During build-out and prior to Lunk Alarm installation, you will need to have the beacon light hardwired by a licensed electrician. Both the hardwired Lunk Alarm light and siren will be wired to a circuit that connects to a switch behind the front desk that can be controlled by Planet Fitness® staff. Do not run motor siren for more than 90 seconds. Running for more than 90 seconds, may cause motor to fail.

## 3D Lettering Checklist:

- Siren
- Beacon light
- 8 standoffs and hardware
- Four support pieces (1 top, 1 bottom, 2 sides)
- Lunk Alarm sign (arrives in 2 pieces folded in halves; 1 top, 1 bottom)

- 1 Install Lunk beacon light: The finished sign will be approximately 94" wide by 76.5" high. The light will be mounted in the center of this space. BEFORE installing it on the wall, test the light. Disassemble the light for installation. Screw the black beacon base to wall and reassemble light.
- 2 Support Lunk Alarm sign: Unfold the two halves of the graphic. Support the seams with the four supplied support pieces (2 sided tape is on the back). See diagram below.
- 3 Mark out standoff placement: Place the complete graphic on the wall, and center over the beacon light. Ensure the Lunk Alarm is level and then mark the holes for the standoffs.
- 4 Install standoffs: Follow instructions for installing standoffs on pg. 4. Do not install graphic yet.
- 5 Plug-in and test the siren. Install the siren by attaching it to a surface in the ceiling rafters above the Lunk Alarm. Use the provided plug-end and plug into a standard US 110v outlet. Consult a licensed electrician for other means of electrical connection.
- 6 Install Lunk Alarm sign: Once the siren and beacon light have been tested, place the graphic on the standoffs per standoff instructions. Do not tighten each standoff, this will allow you to adjust and level out the sign. Once the sign is level, tighten up the standoff caps. Need help installing the standoffs?

Go to [northeastcolor.com/installations](https://northeastcolor.com/installations) and refer to our Standoffs Installation Guide.

